



UDP Relay Configuration Command Overview

- 1) BOOTP/DHCP Enabled : Yes
- 11) Server Address : SET
- 12) Forward Delay : 3
- 13) Maximum Hops : 4

Command {Item=Value/?/Help/Quit/Redraw/Save} (Redraw) : **1=?**
To enable the UDP Relay, enter '1=y', to disable it, enter '1=n'.
Enter 'Item=help' for more information.

Command {Item=Value/?/Help/Quit/Redraw/Save} (Redraw) : **11=?**
To add servers to the FORWARD TO list, enter 'n=a' where 'n' is the menu item number. To delete servers, enter 'n=d'. To display the list of set servers enter 'n='.

Command {Item=Value/?/Help/Quit/Redraw/Save} (Redraw) : **12=?**
To set the Forwarding Delay, enter '3=time' where 'time' is generally in seconds. The legal range is from 0-65535.
Enter 'Item=help' for more information.

Command {Item=Value/?/Help/Quit/Redraw/Save} (Redraw) : **13=?**
To set the Maximum Hops, enter '4=hopcount'. The legal range is from 1-16.
Enter 'Item=help' for more information.

Command {Item=Value/?/Help/Quit/Redraw/Save} (Redraw) : q

How to setup Bootp Server Entry ?

1. Enable Bootp/DHCP

```
/Networking/IP % relay
```

```
UDP Relay Configuration
```

- 1) BOOTP/DHCP Enabled : No

Command {Item=Value/?/Help/Quit/Redraw/Save} (Redraw) : **1=y**

2. Get Server Address set

```
UDP Relay Configuration
```

- 1) BOOTP/DHCP Enabled : **Yes**
- 11) Server Address : UNSET
- 12) Forward Delay : 3

UPD Relay Konfiguration on Xylan OmniSwitch



13) Maximum Hops : 4

Command {Item=Value/?/Help/Quit/Redraw/Save} (Redraw) : **11=a**

```
FORWARD TO Server List
Item      Server address      Server Name (if known)
```

Enter IP address or host name of server to be added to list ['h' for help/<ret>

to exit] : **200.1.1.201**

```
FORWARD TO Server List
Item      Server address      Server Name (if known)
```

1) 200. 1. 1.201

Enter IP address or host name of server to be added to list ['h' for help/<ret>

to exit] : **<return>**

UDP Relay Configuration

```
1) BOOTP/DHCP Enabled : Yes
11) Server Address    : SET
12) Forward Delay     : 3
13) Maximum Hops      : 4
```

3. Get Bootp/DHCP activated

Command {Item=Value/?/Help/Quit/Redraw/Save} (Redraw) : **save**

UDP Relay configuration change, service 1: initializing....UDP Relay initialized.

/Networking/IP %

How to get a list about Bootp Server Entries ?

/Networking/IP % **relay**

UDP Relay Configuration

```
1) BOOTP/DHCP Enabled : Yes
11) Server Address    : SET
12) Forward Delay     : 3
13) Maximum Hops      : 4
```

Command {Item=Value/?/Help/Quit/Redraw/Save} (Redraw) : **11=1**

```
FORWARD TO Server List
Item      Server address      Server Name (if known)
```



1) 200. 1. 1.201

Command {Item=Value/?/Help/Quit/Redraw/Save} (Redraw) : **q**

How to delete a Bootp Server Entry ?

/Networking/IP % relay

UDP Relay Configuration

- 1) BOOTP/DHCP Enabled : Yes
- 11) Server Address : SET
- 12) Forward Delay : 3
- 13) Maximum Hops : 4

Command {Item=Value/?/Help/Quit/Redraw/Save} (Redraw) : **11=d**

FORWARD TO Server List

Item	Server address	Server Name (if known)
------	----------------	------------------------

1)	200. 1. 1.201	
----	---------------	--

Enter item number of server to be deleted from list ['h' for help/<ret> to exit]

: **1**

FORWARD TO Server List

Item	Server address	Server Name (if known)
------	----------------	------------------------

Enter item number of server to be deleted from list ['h' for help/<ret> to exit]

: **<return>**

UDP Relay Configuration

- 1) BOOTP/DHCP Enabled : Yes
- 11) Server Address : UNSET
- 12) Forward Delay : 3
- 13) Maximum Hops : 4

Command {Item=Value/?/Help/Quit/Redraw/Save} (Redraw) : **1=n**

UDP Relay Configuration

- 1) BOOTP/DHCP Enabled : **No**

Command {Item=Value/?/Help/Quit/Redraw/Save} (Redraw) : **save**

UDP Relay configuration change, service 1:

Stopping UDP relay.....stopped.

/Networking/IP %